

LCD MICRO CLEANING KIT

#404211

Thank you for purchasing this MANHATTAN® LCD Micro Cleaning Kit, #404211.

The kit gently removes dirt, fingerprints and smudges from most LCD surfaces — ideal for flat panel displays, TVs, notebook computers and other electronics and computer peripherals.

- Compact, self-contained kit fits in pocket, drawer or notebook computer bag



Isopropyl alcohol-free, the non-aerosol cleaner removes fingerprints and smudges without harsh solvents



Soft brush gently eliminates excess dust and debris without scratching



Soft, lint-free microfiber pads clean without scratching

For best results, spray cleaner onto microfiber cloth, gently wipe then quickly dry any excess liquid from LCD surface. MANHATTAN does not recommend that cleaning solution be *directly* applied to any LCD surface. Not recommended for use on anti-glare, privacy or polarized materials.

SPECIFICATIONS

- Cleaning solution, kit: 2 ml (0.06 oz.); working and storage temperature: -10 – 50° C
- Refills: 3 replacement microfiber pads; cleaning solution: 30 ml (1 oz.)
- Dimensions, kit: 23 x 16 x 2 cm (9 x 6.25 x 0.75 in.); 116 g (4.1 oz.)


MANHATTAN

BRINGING COMPUTERS TO LIFE

MANHATTAN® offers a complete line of PC Components, Peripherals, Cables and Accessories. Ask your local computer dealer for more information or visit us online at

www.manhattan-products.com

Copyright © MANHATTAN

All products mentioned are trademarks or registered trademarks of their respective owners.

MH-404211-QIG-0508-01